


# Operating Instructions

## Vario, VAMc

### Metering Pumps

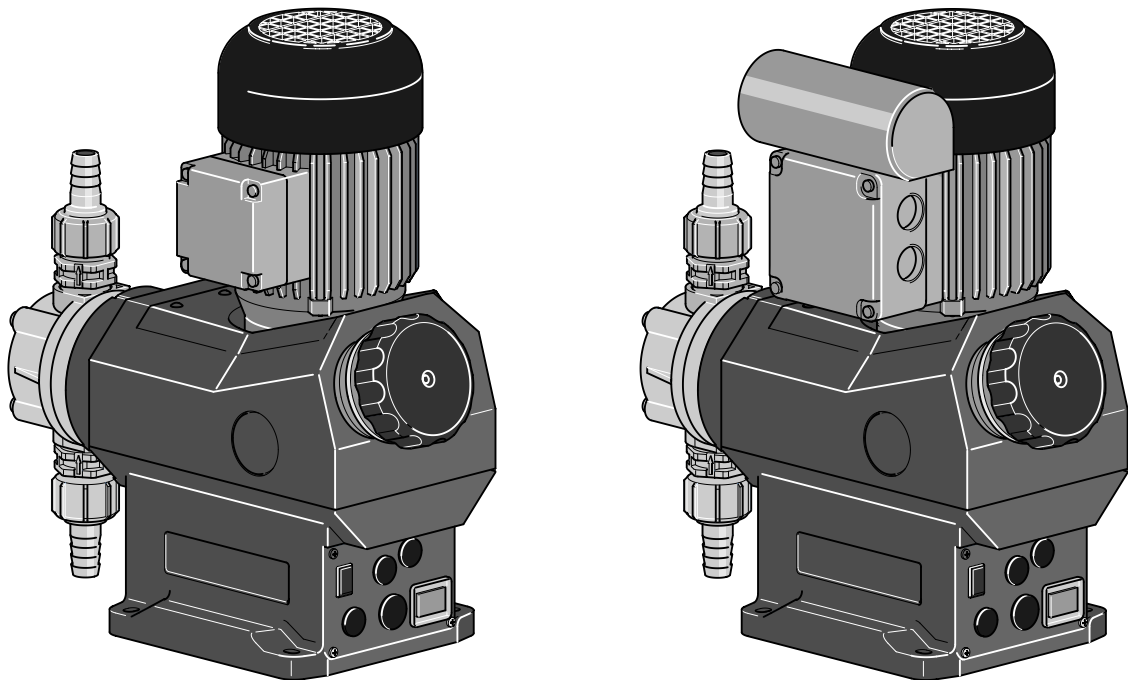

VAMc \_\_\_\_\_

Please enter ident code of the device here.

For safe and correct operation of ProMinent® Vario metering pumps,  
two sets of Operating Instructions are required:  
The product-specific Vario Operating Instructions and “General Operating Instructions ProMinent®  
Motor-Driven Metering Pumps and Hydraulic Accessories”. Operating Instructions must be read together!

**Please completely read through these operating instructions first! · Do not discard!**  
**The operator shall be liable for any damage caused by installation or operating errors!**

**Publishing details:**

Operating Instructions ProMinent® Vario C  
© ProMinent Dosiertechnik GmbH, 2003

ProMinent Dosiertechnik GmbH  
Im Schuhmachergewann 5-11  
69123 Heidelberg  
Germany  
info@prominent.com  
www.prominent.com

Subject to technical modifications.

|   | Page      |
|---|-----------|
| Product Identification/Identcode .....  | 4         |
| <b>1 Safety relevant instructions for ProMinent®<br/>metering pumps</b> .....   | <b>5</b>  |
| 1.1 General notes .....   | 5         |
| 1.2 Notes for installation, commissioning and operation .....                   | 6         |
| 1.3 Notes on servicing and repair .....   | 6         |
| <b>2 Product Description</b> .....  | <b>7</b>  |
| 2.1 Marking/Identification of pump type .....                                   | 7         |
| 2.2 Construction and functional description of drive unit .....                 | 8         |
| 2.2.1 Diagram showing operation of stroke .....                                 | 8         |
| 2.3 Construction and functional description of<br>diaphragm delivery unit ..... | 8         |
| 2.3.1 Integrated overflow valve with<br>bleeder function .....                  | 9         |
| 2.4 The drive motor and the types of control .....                              | 9         |
| <b>3 Commissioning</b> .....  | <b>10</b> |
| 3.1 General notes .....   | 10        |
| 3.2 Installing and connecting .....   | 10        |
| 3.3 Commissioning .....   | 11        |
| 3.4 Troubleshooting .....   | 12        |
| <b>4 Servicing/Maintenance</b> .....  | <b>13</b> |
| 4.1 General servicing notes .....   | 13        |
| 4.2 Replacement of wear parts .....   | 13        |
| 4.3 Disposal of old parts .....   | 14        |
| 4.4 Spare parts set .....   | 14        |
| <b>5 Technical Data</b> .....   | <b>15</b> |
| 5.1 Performance data .....  | 15        |
| 5.2 Dimensions sheet .....  | 16        |
| 5.3 Motor data .....  | 18        |
| <b>6 EC Declaration of Conformity</b> .....                                     | <b>21</b> |

## Product Identification/Identcode

Please enter the identity code given on the device label into the grey boxes below.

| VAMc | Vario Diaphragm Dosing Pump, Version c  |   |   |   |   |   |   |   |
|------|---|---|---|---|---|---|---|---|
|      | <b>Pump type:</b> (figures 1 + 2 = back pressure [bar], figures 3, 4, 5 = feed rate [l/h])<br>10008 10 bar, 8 l/h<br>10016 10 bar, 16 l/h<br>07026 7 bar, 26 l/h<br>07042 7 bar, 42 l/h<br>07012 7 bar, 12 l/h<br>07024 7 bar, 24 l/h<br>04039 4 bar, 40 l/h<br>04063 4 bar, 64 l/h |   |   |   |   |   |   |   |
|      | PVT<br>SST  | <b>Liquid end materials:</b><br>PVDF, PTFE seal<br>Stainless steel with PTFE seal |   |   |   |   |   |   |
|      |   | 0<br>1  | <b>Liquid end version:</b><br>0 No valve springs<br>1 With 2 valve springs, Hastelloy C4, 0.1 bar |   |   |   |   |   |
|      |   |   | 0<br>1<br>2<br>3<br>4<br>7<br>8   | <b>Hydraulic connectors:</b><br>0 Standard connector according to technical data<br>1 Union nut and PVC insert<br>2 Union nut and PP insert<br>3 Union nut and PVDF insert<br>4 Union nut and stainless steel insert<br>7 Union nut and PVDF hose connector<br>8 Union nut and stainless steel hose connector |   |   |   |   |
|      |   |   | 0<br>1  | <b>Version:</b><br>0 With ProMinent label (standard)<br>1 Without ProMinent label   |   |   |   |   |
|      |   |   | M<br>N<br>S   | <b>Electrical power supply:</b><br>M 1 ph., 230 V 50/60 Hz<br>N 1 ph., 115 V 60 Hz<br>S 3 ph., 230/400 V 50/60 Hz   |   |   |   |   |
|      |   |   | 0<br>3  | <b>Stroke sensor:</b><br>0 without stroke sensor<br>3 with Namur stroke sensor  |   |   |   |   |
|      |   |   | 0   | <b>Stroke length adjustment:</b><br>0 Manual stroke length adjustment   |   |   |   |   |
| VAMc | _   | _   | _   | _   | _ | _ | _ | _ |

## 1 Safety relevant instructions for ProMinent® metering pumps

Safety precautions and important operating instructions are divided into classes and provided with symbols. Please familiarise yourself with the following designations and symbols.



### **WARNING**

Describes a potentially dangerous situation. Could result in loss of life or serious injury if preventative measures are not taken.



### **CAUTION**

Describes a potentially dangerous situation. Could result in lesser injuries or damage to property if preventative measures are not taken.



### **IMPORTANT**

Describes a potentially threatening situation. Could result in damage to property if preventative measures are not taken.

### **NOTE**

Guidelines are intended to make your work easier.

### 1.1 General notes

#### **Correct use**

- The Vario must be used for liquids only!
- The Vario may be used only in compliance with the technical data and specifications given in the operating instructions!
- It is forbidden to use the Vario for any other purpose, or to modify it in any way!
- The Vario is not suitable for dosing gases or solids!
- The Vario must be used by trained and authorised personnel only!



#### **CAUTION**

- **Assembly of ProMinent® metering pumps with foreign parts which are not tested or recommended by ProMinent is not permissible and can lead to injury to persons or damage for which no responsibility is accepted!**
- **Pumps must be accessible for operating and servicing at all times. Accesses must not be obstructed or blocked!**
- **For servicing and repair work where dangerous or unknown dosing media are being used, first empty and flush out the liquid end! Observe the safety data sheets for the dosing liquid!**
- **When metering dangerous or unknown liquids those working on the liquid ends must wear protective clothing (goggles, gloves, ...)!**
- **The plug (item. 9 in Fig. 6, page 13) must be fitted during operation!**

#### **Sound intensity level**

The sound intensity level is < 70 dB (A) at maximum stroke, maximum stroke rate, maximum back pressure (water) in accordance with: DIN EN 12639 (Metering Pump Noise Measurement)

## 1.2 Notes for installation, commissioning and operation



### CAUTION

- The metering pump may still contain residual water in the liquid end from testing in the factory.

In the case of media which must not come into contact with water, the liquid end must be cleared of all water before commissioning. To do this rotate the pump 180° and empty the liquid end and then flush from above through the intake connection using a suitable medium.

- When operating the metering pump against a closed isolator at the pressure end, the backpressure can reach several times the maximum permissible backpressure. This can cause the delivery line to burst!  
To avoid this, a pressure relief valve is recommended which limits the backpressure!



### IMPORTANT

- Design the pressure lines so that pressure peaks on the discharge stroke do not exceed the maximum permissible pressure (fit a pressure relief valve if necessary)!
- Adjustments to the stroke length should only be carried out with the pump running!

### NOTE

- The pump shall be secured in such a way that no vibration can occur!  
The valves of the liquid end must always be vertical to ensure correct operation!
- Intake and delivery pipes must always be arranged such that strain-free connection to the liquid end is guaranteed!  
Pipes shall be secured in such a way that no vibration can occur!
- Use only the locking rings and hose fittings designed for the particular hose diameter and also use original hoses with the specified hose dimensions and wall thickness, otherwise the security of the connection is not guaranteed!  
Reductions in hose sizes are to be avoided!  
The permissible pressure stress of the hoses is to be observed.
- When dosing extremely aggressive or dangerous media an arrangement which relieves back into the tank is advisable!  
Moreover, an shut-off valve should be fitted on the pressure and suction sides!

## 1.3 Notes on servicing and repair



### CAUTION

- Metering pumps and their peripherals may only be serviced by expert and authorised persons!
- When carrying out servicing or repairs where dangerous or unknown media are used, always flush the liquid end first!
- When metering dangerous or unknown liquids, those working on the liquid end must wear protective clothing (goggles, gloves, ...)!
- The pressure in the metering pipe must first be released before working on the pump.  
Always empty and flush the liquid end!  
Observe the safety data sheets for the metering liquid!



### WARNING

- Isolate the supply cable or withdraw the mains plug before opening the pump.  
Check for freedom from voltage!  
Always secure the pump against unauthorised restarting during repair work!
- Pumps which are used for dosing radioactive media must not be shipped!

Only send the equipment for repair or maintenance in a cleaned condition and with the liquid end flushed. However, should any safety precautions be necessary even after careful draining and cleaning of the equipment, the required information must be listed in the Safety Declaration!

- The Safety Declaration forms part of the inspection/repair contract.

Maintenance or repair work will only be carried out if a Safety Declaration - correctly and fully completed by an authorised and qualified member of the Operator's staff - is available.

A copy of the form is included in the "General operating instructions for ProMinent motor-driven dosing pumps and hydraulic accessories" or can be downloaded at [www.prominent.com](http://www.prominent.com).

## 2 Product Description

### 2.1 Marking/Identification of pump type

Each Vario metering pump shall be provided with an identification plate on the side of the foot.

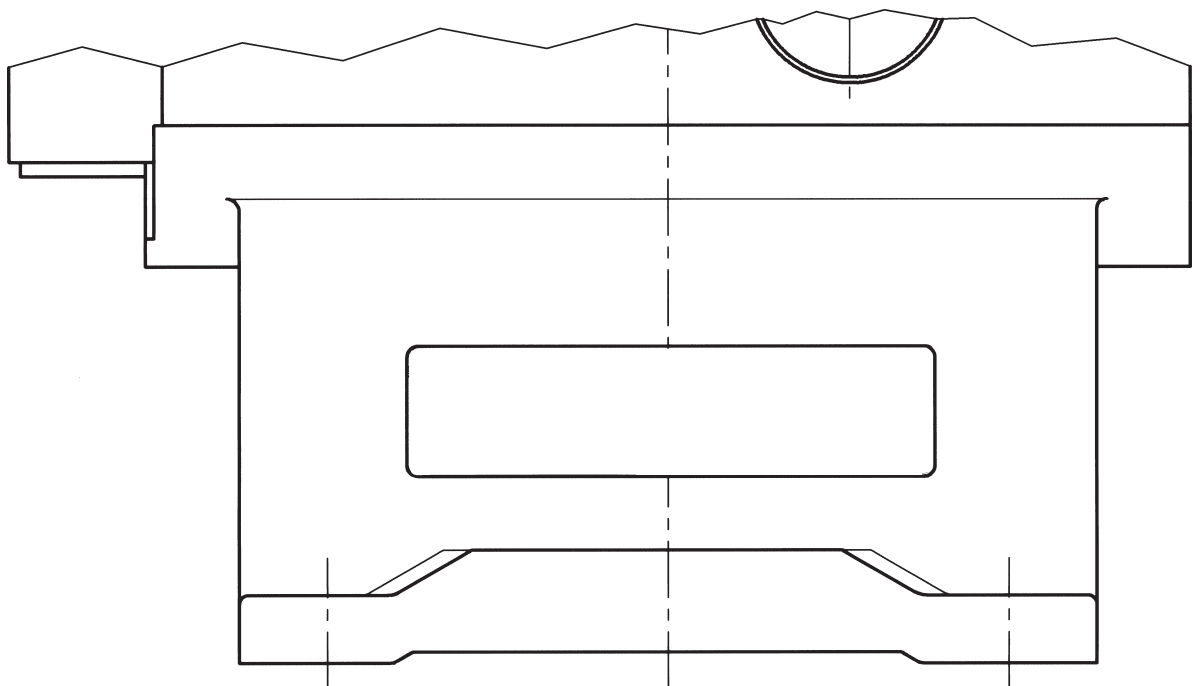


Fig. 1

The identity code and serial number shall be given in addition to the normal technical data. Both these numbers are to be used in all enquiries as they enable the type of metering pump to be clearly identified.

See page 4 for key to the identcodes.

Technical modifications reserved.

## 2.2 Construction and functional description of drive unit

The ProMinent® Vario is an oscillating displacement metering pump whose stroke length can be adjusted in steps of 1%. It is driven by a special custom built single phase AC motor or a standard three phase motor (1). Its drive rotation is reduced by the worm gearing (2) and transmitted via the eccentric roller (3) to the connecting rod (4) and therefore changed to an oscillating motion. A powerful return spring (5) holds the connecting rod against the eccentric roller to provide a return stroke. The length of the stroke is adjusted by using the stroke adjustment knob (6) and shaft (7) to limit the return stroke. The stroke is transmitted directly to the piston. In conjunction with the valves, this generates the pressure or vacuum in the liquid end which is necessary for delivery. The delivery flow is pulsating.

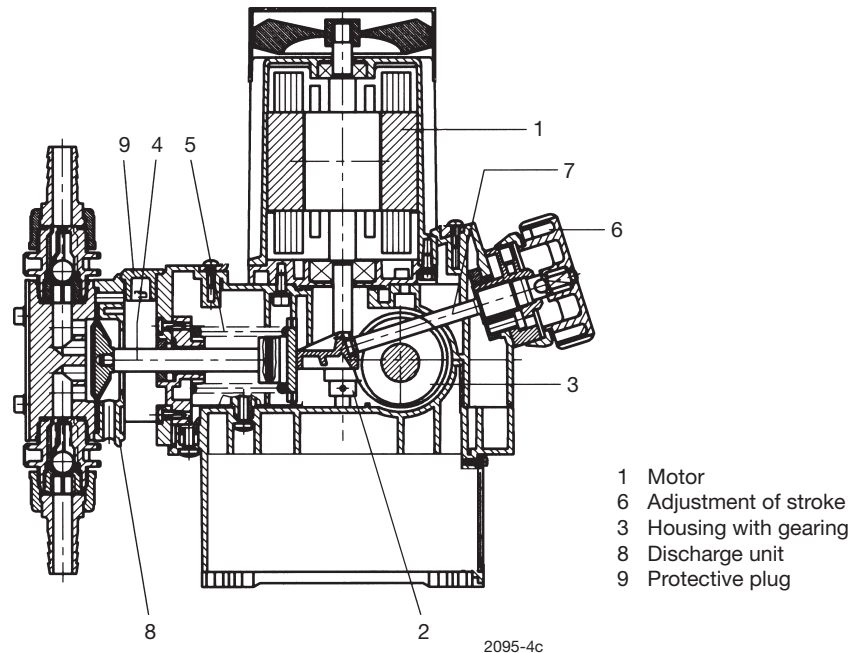


Fig. 2

2095-4c

### 2.2.1 Diagram showing operation of stroke

a) Stroke during max. number and length of strokes

b) with reduced stroke length

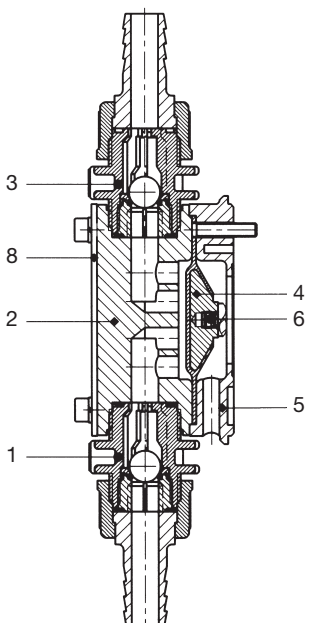
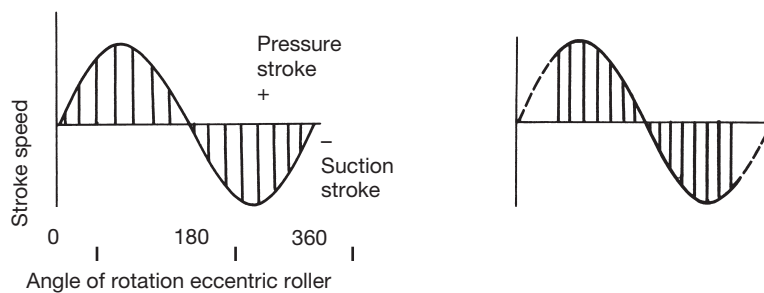


Fig. 3

2096-4.1

### 2.3 Construction and functional description of diaphragm delivery unit

The heart of the delivery unit is the DEVELOPAN® metering diaphragm (4). It hermetically seals the delivery chamber of the liquid end (2) and effects the displacement in the liquid end (2). The end washer (5) of chemically-resistant plastic separates the drive housing from the delivery part and protects the drive from corrosion in the event rupture of the diaphragm. The suction valve (1) and pressure valve (3) which are of identical construction, operate in conjunction with movement of the diaphragm to provide the delivery operation. The valve balls can be spring-loaded for metering viscous media.

The connecting dimensions of valves and liquid ends which are the same size but of different material are the same. The parts can be interchanged as required.



## 2.4 The drive motor

### 1-phase motor

The client connects the equipment directly to the terminal box (see also section 5.3 technical data).

### Standard three-phase motor

The Vario is also optionally available with a 3-phase dual-wound motor. 3 ph., 23/240 V, 50/60 Hz. The client connects the equipment directly to the terminal box (see also section 5.3 Technical data).

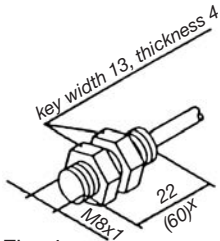


Fig. 4

### Namur type stroke sensor

Material - stainless steel

**Switch aperture  $s_n$  inset** 1.5 mm flush  
See figure above

**Electrical cabling:** DC, two wire, as DIN 19 234 (NAMUR)

**Fixtures:**  
as DIN 19 234 (NAMUR) NJ 1.5-8GM-N

**Features:**

Operating switch apertures  $s_a$   $0 \leq s_a \leq 0.81 s_n$

Reduction factor at V2A 0.85; Al 0.4; Cu 0.3

Reproducibility R  $\leq 0.01$  mm

Switch hysteresis H approx.. 10 %

Standard measurement plate  
1 mm Fe 8 mm x 8 mm

Operating voltage  $U_b$  5 bis 25 V DC

Residual ripple  $\leq 5$  %

Switch frequency f 5 kHz

**Electrical Data:**

Standard voltage 8 V DC (Ri approx. 1 k/ohm)

Individual inductivity 20  $\mu$ H

Individual capacity 16 nF

Output/power uptake  
active surface free  $\leq 3$  mA  
active surface covered  $\leq 1$  mA

**Mechanical Data:**

Ambient temperature 248 - 373 Kelvin  
(-25 °C bis +100 °C)

Enclosure rating as DIN 40 050 IP 67

Permissible impact and Oscillation stress  $b \leq 30g, T \leq 11$  ms  
 $f \leq 55$  Hz,  $a \leq 1$  mm

Connector 2 m, PVC-Kabel, 0,14 mm<sup>2</sup>

Standard symbol/connection: N +  
DC  
-

## 3 Commissioning

### 3.1 General notes

The pulsating operation of the ProMinent® Vario as an oscillating displacement metering pump causes high pressure differences in the pipes on each discharge stroke. If these pressure differences are too great because of unsatisfactory lines, it can lead to high metering errors or to failure of the metering pump. When dosing very viscous media or where the metering lines are very long, a larger internal diameter for the pipe should be chosen if necessary and/or a compressed air chamber or diaphragm pulsation damper should be fitted.



#### CAUTION

- Check that the materials used can withstand the chemicals which are being metered (refer to ProMinent® Resistance List in the Product Catalogue).
- The safety notes in Chapter 1 must be observed.

### 3.2 Installing and connecting

- The metering pump must be installed vertically with its base on a horizontal support.
- The intake and delivery lines shall be laid in such a way that the coupling to the liquid end is free of mechanical strain.
- The pumps and pipes shall be secured so that no vibration can occur.
- The pipes shall be attached in such a way that the pump and liquid end can be moved sideways if necessary.
- When metering extremely aggressive or dangerous media it is advisable to have a relief back to the tank and to have an isolating valve on both the delivery and intake side.
- If the installation instructions are complied with and the stroke length is greater than 30%, a reproducible metering accuracy of more than  $\pm 2\%$  is obtained.

#### Delivery line

- The delivery line shall be designed in such a manner that pressure peaks on the discharge stroke do not exceed the maximum permissible operating pressure.
- To protect against overload, a pressure relief valve with a return to the feed tank is to be provided on the pressure side.
- A pressure relief valve shall always be fitted in conjunction with a compressed air chamber or pulsation damper.



#### CAUTION:

- Motorised metering pumps may under certain circumstances work against a substantially increased operating pressure for short periods without the electrical safety devices responding.  
For this reason the maximum permissible operating pressure must be complied with to protect against accidents and premature wear.

#### Intake line

- The intake line must always be laid vertically.
- It should be as short as possible.
- It shall be dimensioned with regard to cross-section and length such that vacuum which occurs on suction does not reach the vapour pressure of the medium to be metered.
- Curves should be used where possible instead of angles for bends.
- Excessive vacuum on the intake side leads in extreme cases to a break in the column of liquid or to an incomplete return stroke (the return stroke can no longer be detected at the stroke adjusting knob).
- The product  $h \cdot \rho$  shall not exceed the specified maximum suction head.  
 $h$  = geodetic height  
 $\rho$  = density  
 e.g.:  $h = 2 \text{ m}$      $\rho = 1.48$      $2 \cdot 1.48 = 2.96 \text{ mWS (mWG)}$   
 For details of the suction head refer to Chapter 5.1, page 15 „Performance data“.
- It must also be guaranteed that no overload of the drive unit occurs on the suction side. Where there is a positive suction head the above limits shall be observed.
- The suction line shall be dimensioned such that no overload occurs at the end of the suction stroke due to mass lag.

**Pipe calculations**


The necessary lines can be calculated in accordance with the „Calculations of metering lines“ instructions.

When submitting all necessary data in accordance with technical information sheet “Data for discharge line calculation” (see “General Operating Instructions Manual ProMinent® Motor Driven Metering Pumps and Hydraulic Accessories”) the discharge line can be tested at short notice in the plant free of charge.

**3.3 Commissioning**

- Check correct installation in accordance with the aforementioned points and installation notes.
- Bleed the pressure side. Switch on the pump and allow to operate at maximum stroke length until the liquid end is charged. Switch off the pump.
- Close the bleed on the pressure side, if necessary open the shut off valve in the discharge line and allow the pump to operate.
- Check the response pressure of the pressure relief valve.
- Set the required meter rate in accordance with the „Meter rate relative to stroke length“ diagram.
- Check the meter rate and correct if necessary.

**Diagram for setting the meter rate**

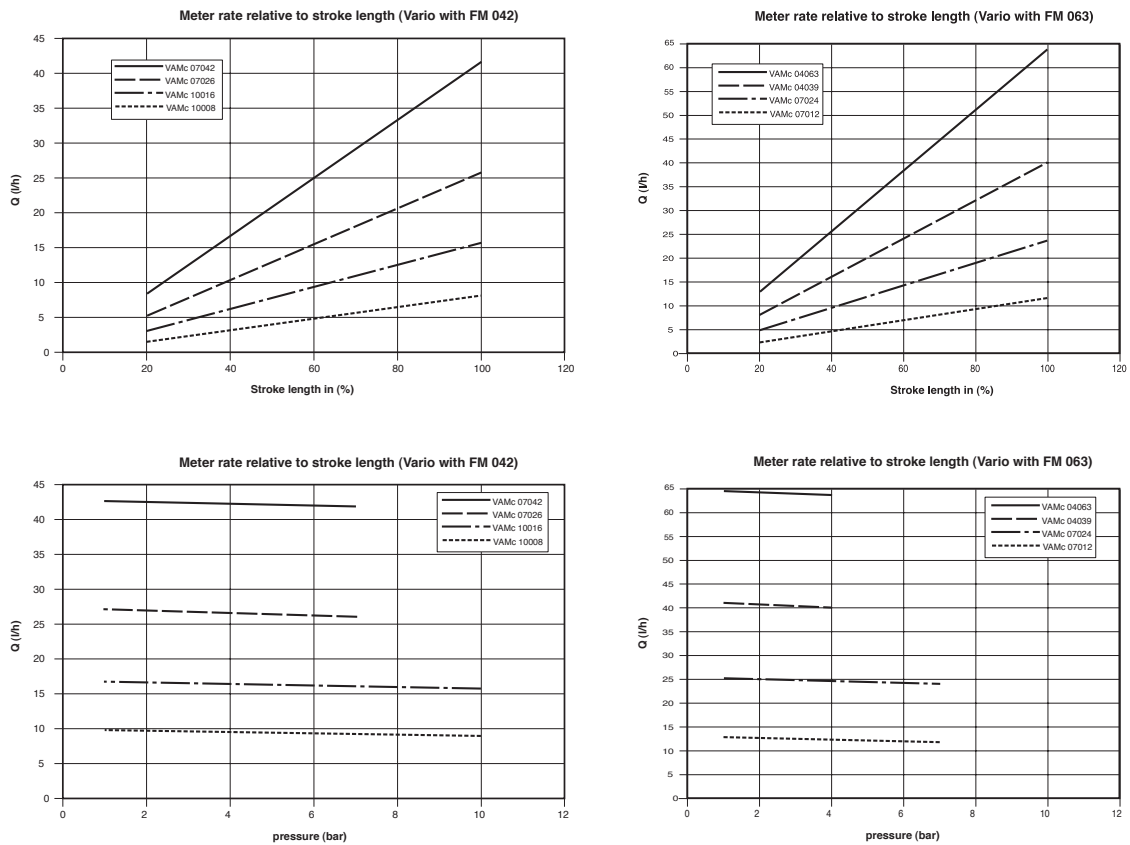

**Setting the stroke length**

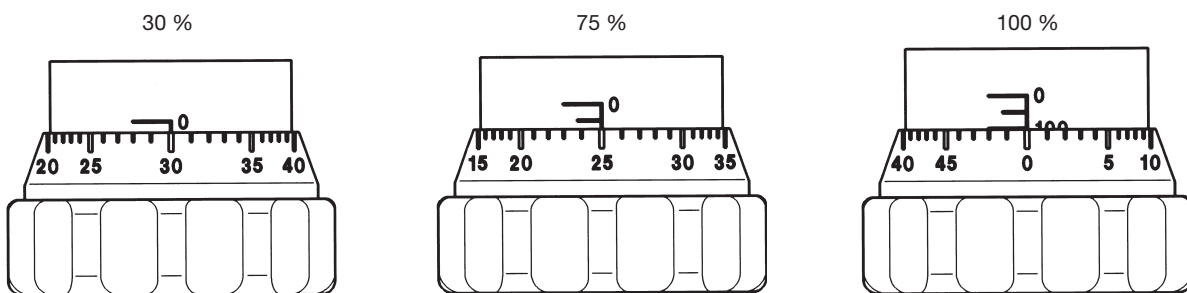


Fig. 5

1 rotation (360°) ≙ 50 % stroke length

2625-4.1

### 3.4 Troubleshooting

| Symptom   | Possible cause  | Remedy  |
|---|---|---|
| - Metering pumps does not suck (on commissioning)                     | - Suction head too high                               | - Install pump closing to feed tank                     |
|   | - Back pressure in the injection line (pressure side) | - Remove backpressure, (e.g. via bypass line)           |
| - No metering even though the drive is running (after long operation) | - Stroke setting 0%                                   | - Increase stroke length (↔100 %)                       |
|   | - Feed tank empty                                     | - Replenish metering medium and restart system          |
|   | - Gas bubble in intake line and liquid end            | - Bleed intake line, check for leaks and restart system |
| - Leakage of metering liquid at the leak outlet of the liquid end     | - Defective diaphragm                                 | - Replace diaphragm (refer to Chapter 4.2)              |
| - Loss of metering performance (after long operation)                 | - Defective wear parts in the valves                  | - Replace (refer to Chapter 4.2)                        |
|   | - Deposits in the valves                              | - Clean or replace valve parts (refer to Chapter 4.2)   |

## 4 Servicing/Maintenance



### CAUTION:

- Repairs to electrical equipment may only be carried by qualified electricians. Serious danger can arise to the user due to incorrect repairs. Repaired electrical equipment must be subjected to a function and safety inspection in accordance with the valid regulations of the consumer country.
- The safety precautions given in Chapter 1 must be complied with.

### 4.1 General servicing notes

- The servicing of Vario metering pumps is limited to checking the metering line and checking for leaks.
- The gearing is lubricated for life by packing with grease. (Type 1: Klüber ISOFLEX Topas NB 5051), capacity 24 ml).
- Spare parts are given in the accompanying spare parts list.
- The individual parts given in the spare parts list are regarded as wear parts.

### 4.2 Replacement of wear parts

#### Replacement of diaphragm

Flush the line (in the case dangerous media wear protective gloves and goggles).

Set the stroke length to zero when the pump is running. Switch off the pump and prevent it from being switched on again. Unscrew priming (1) and discharge connector (3). Remove the plug (9) from the lantern.

Slacken the 4 screws on the pump head (2) and withdraw approx. 5 mm from the screw holes but leave them in the liquid end. Then lightly twist the liquid end unit to the left to slacken the diaphragm (4) on the push rod (6) and unscrew (if necessary insert a suitable single-head eng. wrench through the opening for the plug (9) to hold the push rod (6) still). Clean the seal faces. Place a new diaphragm in the top plate (5) and position the pump head (2) so that the suction connector (1) is above the vent hole of the top plate (5). Insert screws and screw the diaphragm clockwise onto the push rod (6). Tighten by hand. Switch on the pump, set the stroke length to 100 % and turn liquid end to the right while the pump is running until the suction connector (1) is pointing vertically downwards. Disconnect the pump from the mains power supply so that the push rod (6) comes to a halt near the rear limit position

Then screw in screws and tighten alternately to 4.5 ... 5.0 Nm. Push plug (9) back into the opening. Connect priming- (1) and discharge connector (3). Check the pump for tightness at maximum back pressure.

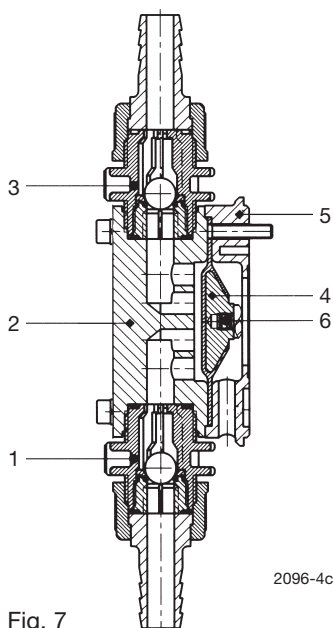


Fig. 7



### IMPORTANT

**Check the tightening torque of the liquid end screws after 24 h in operation!**

Tightening torque for liquid end screws: 4.5 ... 5.0 Nm (for all sizes).

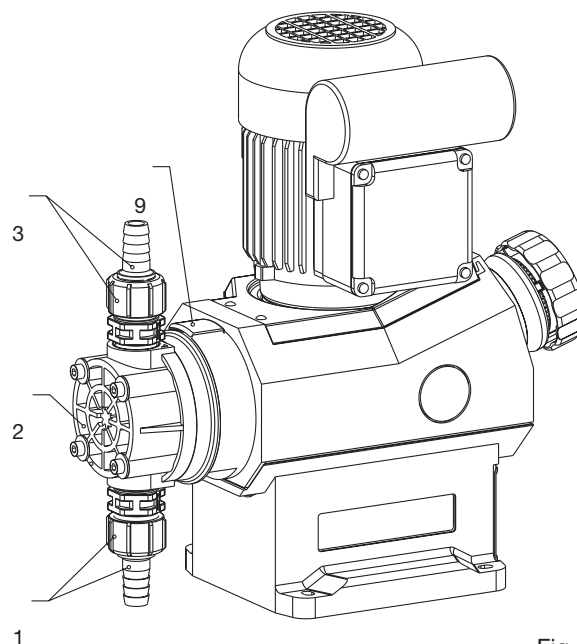


Fig. 6

**Replacement of valve parts**

Flush the line (in the case of dangerous media wear protective gloves, goggles, ...). Switch off the pump and disconnect from the mains. Slacken the connecting unions. Unscrew valve (1) and remove. Where the „valve assembly“ is being changed clean the sealing surfaces and fit the new valve and seal in place and tighten. Connect up. Switch on the pump and check the connections for leaks.

If the internal parts of the valves are being exchanged, unscrew and remove the valve and slacken the valve seat bush using a special tool and unscrew. Replace the parts as necessary and reassemble in reverse order. Clean the sealing faces. Continue as before.

**4.3 Disposal of old parts**



**WARNING**

- **Spring under pressure!**  
Ensure that the return spring (pos. 5, section 2.2) is held under strong mechanical pressure when dismantling the pump.
- **For disposal please observe all locally applicable directives!**

**4.4 Spare parts set**

The spare parts kit contains all components required for maintenance of liquid ends.

**PVT Version**

- 1 pump diaphragm
- 1 suction valve compl.
- 1 discharge valve compl.
- 2 valve balls
- 1 set of seals (jacket rings, ball seat discs)

**SST Version**

- 1 pump diaphragm
- 2 valve balls
- 1 set of seals (jacket rings, flat seals, ball seat)

**Vario Spare Parts Kit**

(Applies to identity code: Type VAMc 10008, 10016, 07026, 07042) **Order No.**


| Liquid end FM 042 - DN  |  | Order No. |
|-------------------------|--|-----------|
| PVT                     |  | 1003641   |
| SST                     |  | 910751    |
| SST (with 2 valve sets) |  | 910750    |

(Applies to identity code: Type VAMc 07012, 07024, 04039, 04063) **Order No.**

| Liquid end FM 063 - DN 10 |  | Order No. |
|---------------------------|--|-----------|
| PVT                       |  | 1003642   |
| SST                       |  | 910756    |
| SST (with 2 valve sets)   |  | 910755    |

**Pump diaphragms**

|   | Order No. |
|---|-----------|
| Vario with <b>FM 042</b> Type VAMc 10008, 10016, 07026, 07042 | 811458    |
| <b>FM 063</b> Type VAMc 07012, 07024, 04039, 04063            | 811459    |

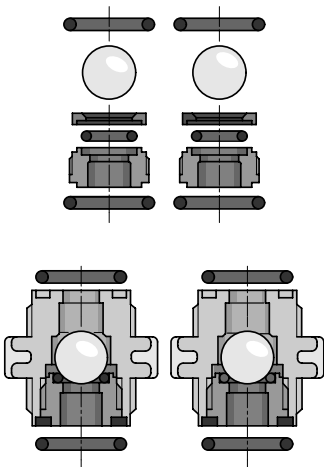

pk\_2\_002

Fig. 8

## 5 Technical Data



### WARNING

Only for modified version: Please observe the „Supplement for modified version“ at the end of the section!

It replaces and supplements the technical data!

### 5.1 Performance data

| Pump Type<br>Vario | at 50 Hz |      |               |                  | at 60 Hz |             |                  |     |     |          |            |  |
|--------------------|----------|------|---------------|------------------|----------|-------------|------------------|-----|-----|----------|------------|--|
|                    | bar      | l/h  | ml/<br>stroke | strokes/<br>min. | psi      | l/h/gph     | strokes/<br>min. | mWG | bar | G - DN   | kg         |  |
| 10008              | 10       | 8.0  | 3.6           | 38               | 145      | 9.6 / 2.5   | 45               | 7   | 2.8 | 3/4 - 10 | 6.0 / 7.2* |  |
| 10016              | 10       | 16.0 | 3.6           | 77               | 145      | 19.2 / 5.1  | 92               | 7   | 2.8 | 3/4 - 10 | 6.0 / 7.2* |  |
| 07026              | 7        | 26.0 | 3.6           | 120              | 102      | 31.2 / 8.2  | 144              | 7   | 2.8 | 3/4 - 10 | 6.0 / 7.2* |  |
| 07042              | 7        | 42.0 | 3.6           | 192              | 102      | 50.4 / 13.3 | 230              | 7   | 2.8 | 3/4 - 10 | 6.0 / 7.2* |  |
| 07012              | 7        | 12.0 | 5.4           | 38               | 102      | 14.4 / 3.6  | 92               | 6   | 1.7 | 3/4 - 10 | 6.0 / 7.2* |  |
| 07024              | 7        | 24.0 | 5.4           | 77               | 102      | 28.8 / 7.6  | 92               | 6   | 1.7 | 3/4 - 10 | 6.0 / 7.2* |  |
| 04039              | 4        | 40.0 | 5.4           | 120              | 58       | 48.0 / 12.7 | 144              | 6   | 1.7 | 3/4 - 10 | 6.0 / 7.2* |  |
| 04063              | 4        | 64.0 | 5.4           | 192              | 58       | 76.8 / 20.3 | 230              | 6   | 1.7 | 3/4 - 10 | 6.0 / 7.2* |  |

\* Data for SST version

### Materials In Contact With Chemicals

|            | Liquid End                    | Suction/ Discharge            | Seals | Valve Balls                   | Valve Seat | Standard connector    |
|------------|-------------------------------|-------------------------------|-------|-------------------------------|------------|-----------------------|
| <b>PVT</b> | PVDF (Polyvinylfluoride)      | PVDF                          | PTFE  | ceramic                       | PTFE       | choice, see identcode |
| <b>SST</b> | stainless steel<br>no. 1.4571 | stainless steel<br>no. 1.4581 | PTFE  | stainless steel<br>no. 1.4404 | PTFE       | choice, see identcode |

DEVELOPAN® pump diaphragm with PTFE coating.

### 5.2 Dimensions sheet Vario C

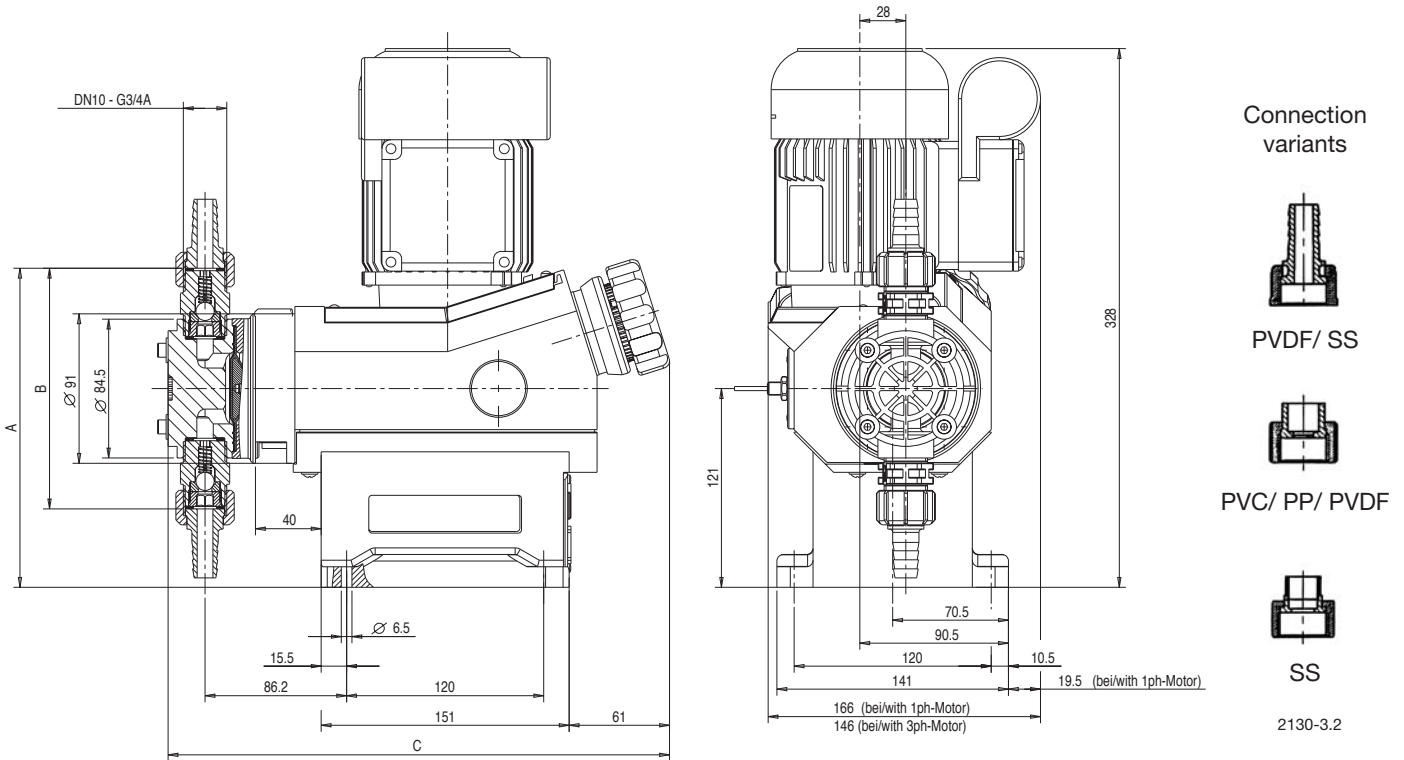


Fig. 9

**Dimensions Vario C (in mm)**

| Material version | A   | B   | C   |
|------------------|-----|-----|-----|
| PVT              | 194 | 147 | 305 |
| SST              | 192 | 143 | 300 |

**Temperature details**

Admissible storage temperature: - 10 to +50 °C  
 Admissible ambient temperature: - 10 to +40 °C

Temperature resistance of the material versions:

| Material, | long term, at max. back pressure | short term, max. 15 min at max. 2 bar |
|-----------|----------------------------------|---------------------------------------|
| PVT       | 50 °C                            | 100 °C                                |
| SST       | 50 °C                            | 120 °C                                |

Short term higher temperatures (see above) are admissible e.g. for sterilization or flushing with hot water

**Climate**

Admissible humidity: 92 % vol. humidity, non condensing



**Supplement for modified version:**  
(Identity code item „Version“: „M-modified“)

[Affix sticker with modified data here!]

5.3 Motor data sheets

**Motor Datenblatt / Motor data sheet / Fiche technique pour moteur**

|   |                |  |            |
|---|----------------|--|------------|
| <b>Bestell Nr.</b><br>order no. / no. de commande | <b>1021378</b> | <b>Hersteller</b><br>producer / producteur | <b>ATB</b> |
|---|----------------|--|------------|

|   |                            |   |           |                      |
|---|----------------------------|---|-----------|----------------------|
| <b>Motor-Typ</b><br>motor type<br>type du moteur                | RBF0,09/2-71RQ             | <b>Leistungsfaktor</b><br>power factor<br>facteur de puissance            | 0,78/0,80 |                      |
| <b>Maschinenart</b><br>type of machine<br>désignation           | 3-Ph. Motor                | <b>Wirkungsgrad</b><br>efficiency<br>rendement                            | 65%       |                      |
| <b>Schutzart</b><br>degree of protection<br>degré de protection | IP55                       | <b>Bemessungsfrequenz</b><br>rated frequency<br>fréquence nominale        | 50/60 Hz  |                      |
| <b>Bauform</b><br>mounting<br>construction                      | IMV18                      | <b>Bemessungsdrehzahl</b><br>rated speed<br>vitesse nominale              | 2790/3350 | U/min<br>rpm<br>t/mn |
| <b>Bemessungsleistung</b><br>rated output<br>puissance nominale | 0,07 kW                    | <b>Wärmeklasse</b><br>temperature class<br>class d'isolement              | F         |                      |
| <b>Bemessungsspannung</b><br>rated voltage<br>tension nominale  | ▲ / Δ<br>400/230 V         | <b>Anzugsstrom</b><br>starting current<br>courant de démarrage            | 4,4/4,6   | fach<br>fold<br>fois |
| <b>Bemessungsstrom</b><br>rated current<br>courant nominale     | 0,20/0,35 A<br>0,19/0,33 A | <b>Anzugsmoment</b><br>starting torque<br>couple de démarrage             | 2,8/2,6   | fach<br>fold<br>fois |
| <b>Geprüft nach</b><br>tested in acc. with<br>contrôlé selon    | DIN EN 60034               | <b>Kippmoment</b><br>pull-out torque<br>couple de décrochage              | 3,0/2,8   | fach<br>fold<br>fois |
| <b>PTB Nr.</b>  |                            | <b>Umgebungstemperatur</b><br>ambient temperature<br>température ambiante | 40 °C     |                      |
| <b>Ex-Schutzklasse</b><br>ex-protective system                  |                            | <b>Schaltung</b><br>connection<br>branchement                             | ▲ / Δ     |                      |

**Anmerkung**  
comments  
observation

**ProMinent**

Pumpentyp                      VAMc\_ \_ \_ \_ \_ S \_ \_

Die Daten entsprechen den Angaben der Motorenhersteller. Kenndaten funktionsgleicher Motoren anderer Hersteller ändern sich nur unwesentlich. Angaben ohne Gewähr. The data correspond to the details given by the motor manufacturers. Ratings of motors with the same functions made by other producers show insignificant changes only. This information is supplied without liability. Les données techniques correspondent au descriptif du fabricant des moteurs. Les données techniques des moteurs similaires chez d' autres fabricants varient très peu. Données sont d' ordre général.

# Motor Datenblatt / Motor data sheet / Fiche technique pour moteur

|   |                |  |            |
|---|----------------|--|------------|
| <b>Bestell Nr.</b><br>order no. / no. de commande | <b>1021379</b> | <b>Hersteller</b><br>producer / producteur | <b>ATB</b> |
|---|----------------|--|------------|

|   |                |   |           |                      |
|---|----------------|---|-----------|----------------------|
| <b>Motor-Typ</b><br>motor type<br>type du moteur                | RBF0,09/2-71RQ | <b>Leistungsfaktor</b><br>power factor<br>facteur de puissance            | 0,94      |                      |
| <b>Maschinenart</b><br>type of machine<br>désignation           | 1-Ph. Motor    | <b>Wirkungsgrad</b><br>efficiency<br>rendement                            | 45 / 44 % |                      |
| <b>Schutzart</b><br>degree of protection<br>degré de protection | IP55           | <b>Bemessungsfrequenz</b><br>rated frequency<br>fréquence nominale        | 50/60 Hz  |                      |
| <b>Bauform</b><br>mounting<br>construction                      | IMV18          | <b>Bemessungsdrehzahl</b><br>rated speed<br>vitesse nominale              | 2750/3340 | U/min<br>rpm<br>t/mn |
| <b>Bemessungsleistung</b><br>rated output<br>puissance nominale | 0,060 kW       | <b>Wärmeklasse</b><br>temperature class<br>class d'isolement              | F         |                      |
| <b>Bemessungsspannung</b><br>rated voltage<br>tension nominale  | 230 V          | <b>Anzugsstrom</b><br>starting current<br>courant de démarrage            | 2,5/2,3   | fach<br>fold<br>fois |
| <b>Bemessungsstrom</b><br>rated current<br>courant nominale     | 0,60/0,65 A    | <b>Anzugsmoment</b><br>starting torque<br>couple de démarrage             | 1,7/2,0   | fach<br>fold<br>fois |
| <b>Geprüft nach</b><br>tested in acc. with<br>contrôlé selon    | DIN EN 60034   | <b>Kippmoment</b><br>pull-out torque<br>couple de décrochage              | 2,4/2,7   | fach<br>fold<br>fois |
| <b>PTB Nr.</b>  |                | <b>Umgebungstemperatur</b><br>ambient temperature<br>température ambiante | 40 °C     |                      |
| <b>Ex-Schutzklasse</b><br>ex-protective system                  |                | <b>Schaltung</b><br>connection<br>branchement                             |           |                      |

**Anmerkung**  
comments  
observation

**ProMinent**  
Pumpentyp VAMc\_ \_ \_ \_ \_ M \_ \_

Die Daten entsprechen den Angaben der Motorenhersteller. Kenndaten funktionsgleicher Motoren anderer Hersteller ändern sich nur unwesentlich. Angaben ohne Gewähr. The data correspond to the details given by the motor manufacturers. Ratings of motors with the same functions made by other producers show insignificant changes only. This information is supplied without liability. Les données techniques correspondent au descriptif du fabricant des moteurs. Les données techniques des moteurs similaires chez d' autres fabricants varient très peu. Données sont d' ordre général.

# Motor Datenblatt / Motor data sheet / Fiche technique pour moteur

|   |                |  |            |
|---|----------------|--|------------|
| <b>Bestell Nr.</b><br>order no. / no. de commande | <b>1021380</b> | <b>Hersteller</b><br>producer / producteur | <b>ATB</b> |
|---|----------------|--|------------|

|   |                |   |       |                      |
|---|----------------|---|-------|----------------------|
| <b>Motor-Typ</b><br>motor type<br>type du moteur                | RBF0,09/2-71RQ | <b>Leistungsfaktor</b><br>power factor<br>facteur de puissance            | 0,98  |                      |
| <b>Maschinenart</b><br>type of machine<br>désignation           | 1-Ph. Motor    | <b>Wirkungsgrad</b><br>efficiency<br>rendement                            | 42%   |                      |
| <b>Schutzart</b><br>degree of protection<br>degré de protection | IP55           | <b>Bemessungsfrequenz</b><br>rated frequency<br>fréquence nominale        | 60 Hz |                      |
| <b>Bauform</b><br>mounting<br>construction                      | IMV18          | <b>Bemessungsdrehzahl</b><br>rated speed<br>vitesse nominale              | 3390  | U/min<br>rpm<br>t/mn |
| <b>Bemessungsleistung</b><br>rated output<br>puissance nominale | 0,060 kW       | <b>Wärmeklasse</b><br>temperature class<br>class d'isolement              | F     |                      |
| <b>Bemessungsspannung</b><br>rated voltage<br>tension nominale  | 115 V          | <b>Anzugsstrom</b><br>starting current<br>courant de démarrage            | 2,8   | fach<br>fold<br>fois |
| <b>Bemessungsstrom</b><br>rated current<br>courant nominale     | 1,30 A         | <b>Anzugsmoment</b><br>starting torque<br>couple de démarrage             | 2,3   | fach<br>fold<br>fois |
| <b>Geprüft nach</b><br>tested in acc. with<br>contrôlé selon    | DIN EN 60034   | <b>Kippmoment</b><br>pull-out torque<br>couple de décrochage              | 3,2   | fach<br>fold<br>fois |
| <b>PTB Nr.</b>  |                | <b>Umgebungstemperatur</b><br>ambient temperature<br>température ambiante | 40 °C |                      |
| <b>Ex-Schutzklasse</b><br>ex-protective system                  |                | <b>Schaltung</b><br>connection<br>branchement                             |       |                      |

**Anmerkung**  
comments  
observation

## ProMinent

Pumpentyp                      VAMc\_ \_ \_ \_ \_ N \_ \_

Die Daten entsprechen den Angaben der Motorenhersteller. Kenndaten funktionsgleicher Motoren anderer Hersteller ändern sich nur unwesentlich. Angaben ohne Gewähr. The data correspond to the details given by the motor manufacturers. Ratings of motors with the same functions made by other producers show insignificant changes only. This information is supplied without liability. Les données techniques correspondent au descriptif du fabricant des moteurs. Les données techniques des moteurs similaires chez d' autres fabricants varient très peu. Données sont d' ordre général.

## EC Declaration of Conformity

We,

**ProMinent Dosiertechnik GmbH**  
**Im Schuhmachergewann 5 - 11**  
**D - 69123 Heidelberg**

hereby declare that, on the basis of its functional concept and design and in the version brought into circulation by us, the product specified in the following complies with the relevant, fundamental safety and health stipulations laid down by EC regulations.

Any modification to the product not approved by us will invalidate this declaration.

Product description : *Metering pump, series Vario C*

Product type : *VAMc...*

Serial number : *see type identification plate on device*


Relevant EC regulations : *EC - machine regulation (98/37/EC)*  
*EC - low voltage regulation (73/23/EEC)*  
*EC - EMC regulation ( 89/336/EEC subseq.92/31/EEC)*

Harmonised standards used,  
in particular : *DIN EN 292-1, DIN EN 292-2, EN 809*  
*DIN EN 60335-1 , DIN EN 60335-2-41*  
*DIN EN 50081-1/2, DIN EN 50082-2, DIN EN 61006-1*

National standards and other  
technical specifications used,  
in particular :

Date/manufacturer's signature :

June 12, 2003

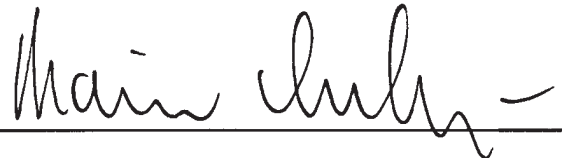

The undersigned :

*Dr. Rainer V. Dulger, Executive Vice President R&D and Production*





# Die ProMinent Firmengruppe / The ProMinent Group

## Stammhaus / Head office

ProMinent Dosiertechnik GmbH · Im Schuhmachergewann 5-11 · 69123 Heidelberg · Germany  
 info@prominent.com · www.prominent.com · Tel.: +49 6221 842-0 · Fax: +49 6221 842-617

## Tochtergesellschaften / Subsidiaries

ProMinent Argentina S.A. (**Argentina**)  
 Tel.: +54 11 4742-4009  
 pro01@fibertel.com.ar

ProMinent Fluid Controls Pty. Ltd. (**Australia**)  
 Tel.: +61 2 94500995  
 sales@prominentfluid.com.au  
 www.prominentfluid.com.au

ProMinent Dosiertechnik Ges. mbH (**Austria**)  
 Tel.: +43 7448 30400  
 office@prominent.at  
 www.prominent.at

ProMinent Fluid Controls (Bangladesh) Ltd. (**Bangladesh**)  
 Tel.: +8802 8319047  
 info@prominent-bd.com  
 www.prominent-bd.com.

ProMinent Belgium S.A., N.V. (**Belgium**)  
 Tel.: +32 2 3914280  
 info@prominent.be

ProMinent Brasil Ltda. (**Brazil**)  
 Tel.: +55 11 43610722  
 prominent@prominent.com.br  
 www.prominent.br

ProMinent Fluid Controls BG (**Bulgaria**)  
 Tel.: +359 2 9631921  
 prominent@abv.bg

ProMinent Fluid Controls Ltd. (**Canada**)  
 Tel.: +1 519 8365692  
 info@prominent.ca  
 www.prominent.ca

ProMinent Fluid Controls China Co. Ltd. (**P.R. of China**)  
 Tel.: +86 411 87315738  
 dr.r.hou@prominent.com.cn  
 www.prominent.com.cn

ProMinent Bermat S.A. (**Chile**)  
 Tel.: +56 2 3354 799  
 slagos@prominentbermat.cl  
 www.prominetbermat.de

ProMinent Dosiertechnik CS s.r.o. (**Czech Republ.**)  
 Tel.: +420 585 757011  
 info@prominent.cz  
 www.prominent.cz

ProMinent Finland OY (**Finland**)  
 Tel.: +35 89 4777890  
 prominent@prominentfinland.fi

ProMinent France S.A. (**France**)  
 Tel.: +33 3 88101510  
 contact@prominent.fr  
 www.prominent.fr

ProMinent ProMaqua GmbH (**Germany**)  
 Tel.: +49 6221 6489-0  
 info@promaqua.com  
 www.promaqua.com

ProMinent Fluid Controls (UK) Ltd. (**Great Britain**)  
 Tel.: +44 1530 560555  
 sales@prominent.co.uk  
 www.prominent.co.uk

ProMinent Hellas Ltd. (**Greece**)  
 Tel.: +30 210 5134621 / 33  
 info@prominent.gr

ProMinent Magyarországi Kft. (**Hungary**)  
 Tel.: +36 96 511400  
 prominent@prominent.hu  
 www.prominent.hu

Heidelberg ProMinent Fluid Controls India Pvt. Ltd. (**India**)  
 Tel.: +91 80 23578872  
 prominent@hpfccindia.com  
 www.prominentindia.com

ProMinent Fluid Controls Ltd. (**Ireland**)  
 Tel.: +353 71 9151222  
 info@prominent.ie

ProMinent Italiana S.R.L. (**Italy**)  
 Tel.: +39 0471 920000  
 info@prominent.it  
 www.prominent.it

ProMinent Japan Ltd. (**Japan**)  
 Tel.: +81 35812 7831  
 info@prominent.co.jp

ProMinent Korea Co. Ltd. (**Republic of Korea**)  
 Tel.: +82 31 7018353  
 info@prominent.co.kr  
 www.prominent.co.kr

ProMinent Office Kazakhstan (**Kazakhstan**)  
 Tel.: +7 3272 504130  
 prominent@ducatmail.kz

ProMinent Office Kaunas (**Lithuania**)  
 Tel.: +370 37 325115  
 prominent1@takas.lt

ProMinent Fluid Controls (M) Sdn. Bhd. (**Malaysia**)  
 Tel.: +603-806 825 78  
 info@pfc-prominent.com.my  
 www.pfc-prominent.com.my

ProMinent Fluid Controls Ltd. (**Malta**)  
 Tel.: +356 21693677  
 info@pfc.com.mt

ProMinent Fluid Controls de México, S.A. de C.V. (**Mexico**)  
 Tel.: +52 (442) 2189920 / 9551  
 venfas@prominent.com.mx

ProMinent Verder B.V. (**Netherlands**)  
 Tel.: +31 30 6779280  
 info@prominent.nl  
 www.prominent.nl

ProMinent Dozotechnika Sp. z o.o. (**Poland**)  
 Tel.: +48 71 3980600  
 info@prominent.pl

ProMinent Portugal Controllo de Fluídos, Lda. (**Portugal**)  
 Tel.: +35 121 9267040  
 geral@prominent.pt  
 www.prominent.pt

ProMinent Verder s.r.l. (**Romania**)  
 Tel.: +40 269 234408  
 office@prominent.ro

ProMinent Dositechnika OOO (**Russia**)  
 Tel.: +7 095 7874501  
 info@prominent.ru

Proshield Ltd. (**Scotland**)  
 Tel.: +44 1698 260260  
 pcp@proshield.co.uk  
 www.proshield.co.uk

ProMinent Fluid Controls (Far East) Pte. Ltd. (**Singapore**)  
 Tel.: +65 67474935  
 pfc@prominent.com.sg

ProMinent Slovensko s.r.o. (**Slovak. Republ.**)  
 Tel.: +421 2 48200111  
 prominent@prominent.sk  
 www.prominent.sk

ProMinent Fluid Controls Pty. Ltd. (**South Africa**)  
 Tel.: +27 11 866039341  
 promsa@mweb.co.za

ProMinent Gugal S.A. (**Spain**)  
 Tel.: +34 972 287011/12  
 prominent@prominentspain.com  
 www.prominent.es

ProMinent Doserteknik AB (**Sweden**)  
 Tel.: +46 31 656600  
 info@prominent.se  
 www.prominent.se

Tomal AB (**Sweden**)  
 Tel.: +46 (0) 346-713100  
 info@tomal.se  
 www.tomal.se

ProMinent Dosiertechnik AG (**Switzerland**)  
 Tel.: +41 44 8706111  
 info@prominent.ch  
 www.prominent.ch

ProMinent Fluid Controls (Taiwan) Ltd. (**Taiwan**)  
 Tel.: +886 7 8135122  
 richard@prominent.com.tw  
 www.prominent.com.tw

ProMinent Fluid Controls (Thailand) Co. Ltd. (**Thailand**)  
 Tel.: +66 2 3760008  
 pfc@prominent.co.th  
 www.prominent.co.th

ProMinent Office Kiev (**Ukraine**)  
 Tel.: +380 44576 1855  
 prominent@i.com.ua

ProMinent Fluid Controls, Inc. (**USA**)  
 Tel.: +1 412 7872484  
 sales@prominent.cc.us  
 www.prominent.us

ProMinent Juffali FZC (**UAE**)  
 Tel.: +97 1655 72626  
 a.sadaga@prominentfzc.ae

## Vertretungen weltweit / Distributors Worldwide

Angola · Bahrain · Bolivia · Botswana · Cameroon · Colombia · Costa Rica · Croatia · Cuba · Cyprus · Denmark · Ecuador · Egypt · El Salvador · Ethiopia · Ghana · Guatemala · Hong Kong · Indonesia · Iran · Ireland · Island · Israel · Jordan · Kenya · Kuwait · Macedonien · Malta · Mauritius · Montenegro · Mozambique · Namibia · New Zealand · Nigeria · Norway · Oman · Pakistan · Panama · Paraguay · Peru · Philippines · Qatar · Saudi Arabia · Serbia · Slovenia · Sudan · Syria · Tanzania · Tunisia · Turkey · Turkmenistan · UAE · Uganda · Uruguay · Venezuela · Vietnam · White Russia · Zambia · Zimbabwe

Anschriftennachweise erhalten Sie durch: / Addresses of distributors are available from: ProMinent Dosiertechnik GmbH, Germany